

Engineering Drawing & Design 7e
Jensen/Helsel/Short

Directions to obtain Bearings Tables direct from manufacturer (SKF)
For use with Chapter 21

For specifications and detailed information on bearings, follow the instructions below:

1. Go to www.skf.com/products
2. Select "Bearings and Units" (the blue oval).
3. Select "Product Tables"; this will open another window
4. Choose the type of bearing from the list.
5. Choose the specific bearing from the list; the table appears.